



## OVER 200 PATTERNS AND COLOUR COMBINATIONS

Neo Motion™ sync products provide an amazing choice that has a colour mode for every taste!

## CUSTOM LIGHTING MODES

Have a favourite team that you want to support with light? Set your own colour combination

## SYNC MULTIPLE PRODUCTS SEAMLESSLY

Connect Multiple Neo Motion™ sync products together seamlessly, with auto detection within the LED Smart App. Group lighting modes together for the ultimate lightshow!

## SOUND REACTIVE LIGHTING

Singing loud or talking trash in game? Neo Motion™ sync can listen\* and animate the LED lights!

## MUSIC MODE

Start party mode with your favourite song from your phone. The lights will react in motion with the rhythm!

## SET LIGHTS TO TIMERS!

Dim the lights at night, or set a wake-up sunrise with the timer feature. Letting you set colours/patterns to certain times of the day!

## BLUETOOTH CONNECTION

No pairing required, simply open the app and connect!  
\*Connects using the app.

# NEO MOTION SYNC

\*Products listen, but do not record. So, no data is shared or stored from voice.



## 1. DOWNLOAD AND INSTALL LED SMART

Available via IOS or Google Play, use the below QR's to get started.



## 2. PAIR TO THE DEVICE FOR LED


- a. For single products
- b. Select the X Rocker icon in the LED Smart app, go to 'mode' and select 1:Forward Dreaming as the setting

### b. For grouped products


On the main device settings menu, select 'Group'

- In that menu, select both devices with the X Rocker logo
- Save the group, then go to 'mode', select 1: Forward Dreaming

## 2. A

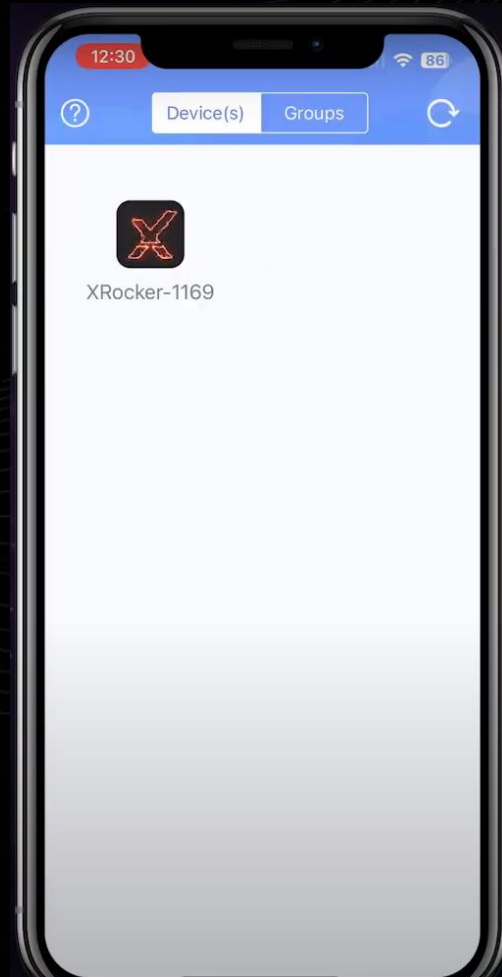

## 2. B

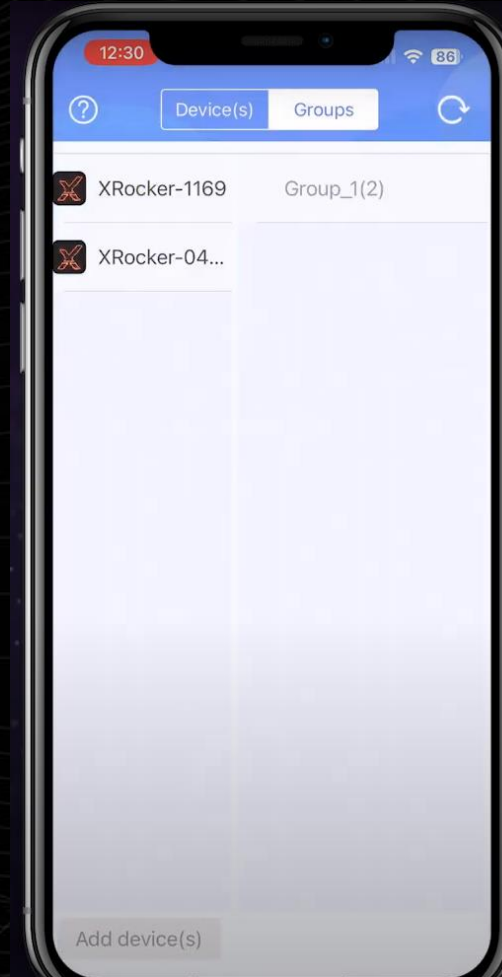 





# NEO MOTION™ SYNC CONTROL



DOWNLOAD ON THE APP STORE



GET IT ON A V

## Technical Parameters

### Compatible with

Android 7 and above /  
IOS 12.0 and above

## INSTRUCTIONS

1. Allow Location settings if not done so already
2. Allow the App to connect to nearby devices
3. On the main screen – press the refresh icon to search for nearby Neo Motion™ Sync devices
4. To control a single device – select the Devices menu and click the icon for the device you want to control
5. To control a group of devices – select 'groups' from the top of the screen
6. On the left side of the screen, click on all devices you want to control together, then select 'Add Device'
7. Rename the group of devices and click 'Confirm'
8. Click on the group name to enter control for all

## ADDING CUSTOM COLOURS/PATTERNS

Short press on the [+] boxes and select a colour or pattern to add.

To remove the colour or pattern, long press on the button to delete the selection.

**Settings:** You can set RGB sorting, timing, shake, and change skin.

Set RGB sort – Adjust pink



Adjust RGB order



4

## (Settings)-Timer Mode:

1. Press [+] to create a new timer
2. Set the function to either turn on/ turn off or a pattern
3. Set the date you would like the instruction to run
4. Once set, click 'Send', the device will first move to confirm to send the instruction to the Neo Motion™ device. If you see a turn on function icon, it means that a turn on the lights feature you turn the lights back on using the app.



Add timer



## Technical Support:



7

## LED CONTROLLER TYPES

### Furniture Controller



- ▶ Light return key: Touch this key to return to the previous light color
- ▶ Power button: Long Press to turn on/off the lights Short Press
  1. Single Colour Modes
  2. Dynamic RGB Modes
  3. Sound reactive control modes
- ▶ Light forward button: Touch the button to select the next colour/light in sequence


Need Help? Contact X Rocker at: [www.xrocker.com/help](http://www.xrocker.com/help)

**IMPORTANT:** You must keep your original retail receipt as proof of purchase. Please retain for future reference.

2

**Colour Interface:** This interface has control single colour. It uses a colour ring for control. Also, here you set RGB values and WHITE controls White LED and brightness.

Colour ring

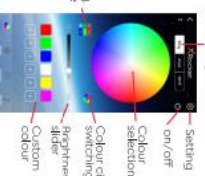

**Mode Interface:** Use this to choose from over 200 pattern modes, adjust the speed and brightness and store your favourite.

**Custom Interface:** Select your favourite colours in sequence and animate your own custom pattern.

Custom

Ring

Mode

Selection



5

## USE OF THE OPTIONAL LED SMART/ NEO MOTION™ SYNC APP

### Ownership

The App, offered for use here to control the Neo Motion™ lighting effects via a mobile device is provided by a Third-Party software developer and is made available free/ gratis to the user via the Google Play Store or Apple App Store. The LED Smart App is not affiliated, connected, controlled, or owned by X Rocker or any part of the group of companies which own the X Rocker brand. The use of the App is voluntary, and the decision to download and use the App is made fully, of this knowledge and shall be your own decision to download, install, grant permissions, and use the App to control Neo Motion lighting from X Rocker.

### Permissions

The App requires several permissions from the mobile device to function correctly. These permissions are (but not limited to): Phone, Contacts, Music, Read & Write, BT and Wi-Fi LAN. The user of the App upon installing the App and granting the Third-Party App developer and App access to these permissions, does so in the full knowledge that this in no way forms any kind of legal agreement with X Rocker and is a wholly independent relationship between the User and Third-Party App developer.

### Performance

X Rocker makes no guarantees to the user using this App as to the performance of the App. The App will require updates from the applicable App Store from time to time in order to maintain functionality. X Rocker makes no guarantees over the term or longevity of performance of the App and its ability to be available for download and control the lighting. For this reason, all the items using this App also come with a manual function on the item to control the Neo Motion.

8

## KEEP FOR FUTURE REFERENCE. DOWNLOADING THE APP/ GETTING STARTED



1. Download the LED SMART APP with your mobile phones by scanning the QR code on user manual or search the 'LED SMART' APP in iPhone App store or Google play store.
2. After the app is downloaded, please ensure that Bluetooth and location settings are switched on for LED Smart product.
3. Power on your Neo Motion™ Sync product.
4. Open the LED Smart App, The Neo Motion (Sync) App should automatically be discovered and ready to use.



### Unable to Connect Troubleshooting

1. Please ensure that power is correctly being provided to the Neo Motion™ Sync product.
2. Check that location settings and Bluetooth is switched on.
3. If other devices have been used with Neo Motion Sync, the app on that device needs to be closed before another can control the LED.
4. If devices do not show in the pairing screen, please refresh the screen by pressing the refresh button.
5. If paired but no light showing – press the power button in the app to switch the lights on.
6. Please ensure App is up to date by checking Google Play or Apple iOS stores.

3

**Voice Mode:** The voice control interface has hundreds of voice control modes to choose from. The effect that happens near the LED Control box.

Sound patterns

Sound patterns



Custom colour

Play/ Pause

Play progress

Song Library

Next track



\*Storage permissions must be granted to enable the feature.

6

### Warranty

App control of the item is explicitly excluded from the warranty of the item purchased and should the item not function with the App, this shall not render the item as having a fault or being faulty. The App is supported by X Rocker only as a means of adding additional functionality which is open to the user on a grants basis to decide to use or not. It is not compulsory to use the App to use the Neo Motion. Returns, refunds or claims made to the manufacturer, or failure of the App are not valid and will not be supported by X Rocker.

### Data

X Rocker hereby states that it shall not collect, store or use any data whatsoever from any of the Users of the App, or request, data about the App Users from the Third-Party App Developer. X Rocker UK is registered at the ICO for all GDPR matters covered by The Data Protection Act 2018. Any permissions given to the Third-Party by the User of the App is done in accordance with the understanding that X Rocker is a wholly independent entity and not affiliated with the App Provider for data collection purposes and the use of said data. X Rocker is not able to make any claims and/or guarantees on behalf of the Third-Party App developer and their use of any data collected by their App.

### Liabilities and Rights to Claim.

By downloading and using the Third-Party App to control Neo Motion items, the User hereby agrees that X Rocker shall not be liable or responsible in any way whatsoever for a loss of function, service, data, damage, or any other claimed or actual defect, claimed or caused as a result of using the App on any type of mobile or electronic device such as mobile, tablet and smart phone. X Rocker does not accept any liability, all the rights to handle X Rocker liable, any claims or liabilities as a result of the User using the App.

9

## 1. LIGHTS NOT SHOWING (VISIBLE IN APP)

- On the app, turn the product (power symbol) off and on.

## 2. LIGHTS ONLY PARTIALLY SHOWING ON PRODUCT

- Go to “Settings”
  - Click “setting”
  - Change pixel count value from current to 200
- Click the tick and check the product again.

## 3. NO LIGHTS ON PRODUCT (NOT VISIBLE IN APP)

- Press and hold the power button on the product for 10 seconds. Try twice as this may have also turned the product off.
- Check that a Customer/ friend/family member is not already connected to the product with their phone. (the product will only be visible to one user at a time.) Simply close their app and the product should become discoverable.

## 4. LIGHTS FLICKERING/UNRESPONSIVE – (DEVICE VISIBLE IN APP)

- Ensure the lights are not set to sound reactive (voice or music) mode. You can test this initially by clapping or making sound near the product first.
- Simply select any of the pattern modes to change the setting away from sound reactive.

