FORTRESS GAMING BUNK BED

IMPORTANT - READ CAREFULLY - RETAIN FOR FUTURE REFERENCE

XRocker



Dimensions

Width - 197.2CM

Depth - 141.5CM

Height - 183.1CM

Need Help? Contact X Rocker at: www.xrockeruk.com/pages/support IMPORTANT: You must keep your original retail receipt as proof of purchase.

LZL00-08/04/2020



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts may cause choking hazard..
- Parts of the assembly will be easier with 2 people.

- Make sure you have enough space to layout the parts before starting.
- Assemble the item as close to its final position (in the same room) as possible.
- Dispose of all packaging carefully and responsibly.
- Place the product on flat and steady surface during use.

- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Keep these instructions for further use.
- To ensure an easier assembly we strongly advise that al fittings are only finger tightened during initial assembly. Only upon completion of the assembly should all fixing points be fully tightened.

Care and maintenance

Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.


- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste.
 Take to your local authority waste disposal center.

Handy Hints

Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

 Regularly check and ensure that all bolts and fittings are tightend properly.

Important - Please read these instructions fully before starting assembly

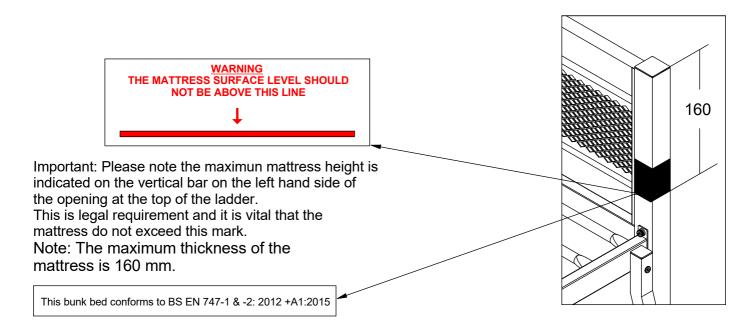


DO NOT REMOVE THE LABEL FROM THE BED

- a) **WARNING** "High beds and the upper bed of bunk beds not suitable for children under six years due to the risk of injury from falls":
- b) **WARNING** "Bunk beds and high beds can present a serious risk of injury from strangulation if not used correctly. Never attach or hang tiems to any part of the bunk bed that are not designed to be used with the bed, for example, but not limited to ropes, strings, cords, hooks, belts and bags"
- c) **WARNING** "Children can become trapped between the bed and the wall, a roof pitch, the ceiling, adjoining pieces of furniture (e.g. cupboards) and the like. To avoid risk of serious injury the distance between the top safety barrier and the adjoining structure shall not exceed 75 mm or shall be more than 230 mm":
- d) WARNING Do not use the bunk bed/high bed if any structural part is broken or missing;
- e) Always follow the manufacturer's instructions;
- f) The recommended size of the mattress to be used with the bed is 1900mm x 900mm, Maximum mattress thickness:160mm;
- g) Bed must be aired to maintain a low humidity and to stop moisture in its surroundings.
- h) This complies with the requirements of the European Safety Standard BS EN 747-1 & -2: 2012 +A1:2015.
- i) Do not allow more than 1 person on the upper bunk at one time.
- j)This product is not suitable for children under 6 years.

Components - Panels


Please check you have all the panels listed below


PARTS

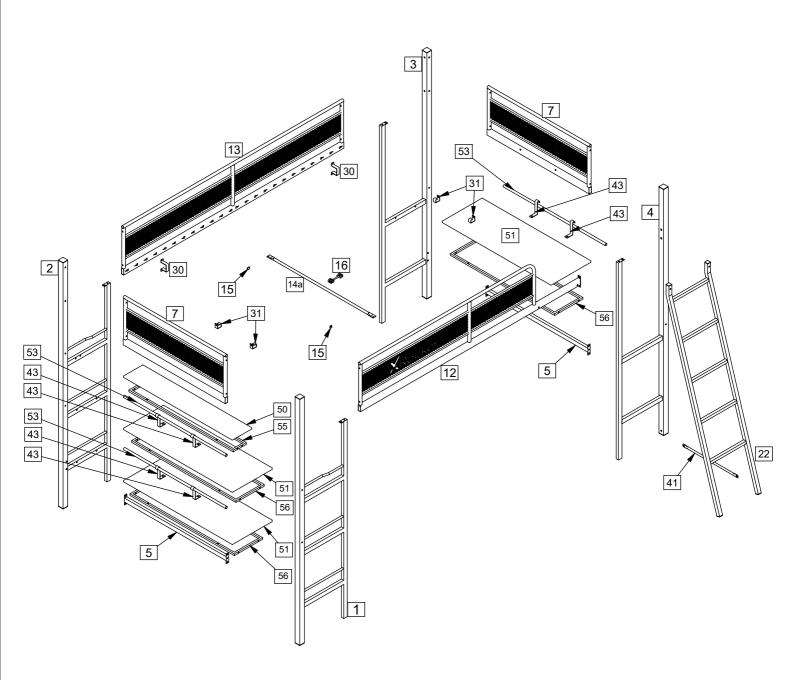

Components - Panels


Please check you have all the panels listed below

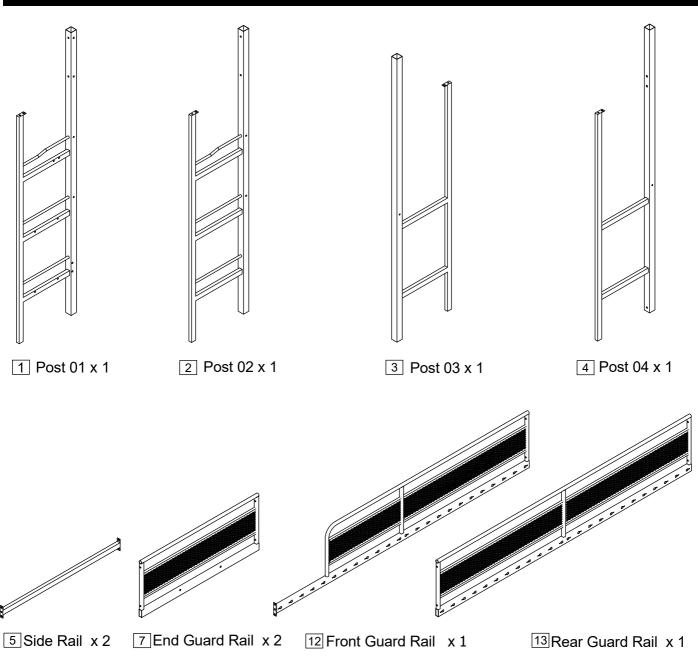

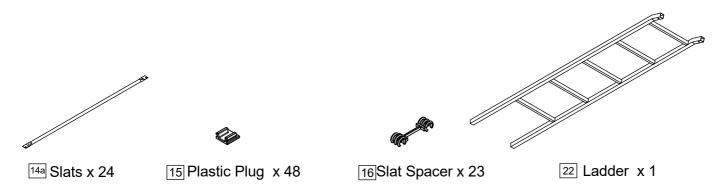

Components - Panels

Please check you have all the panels listed below

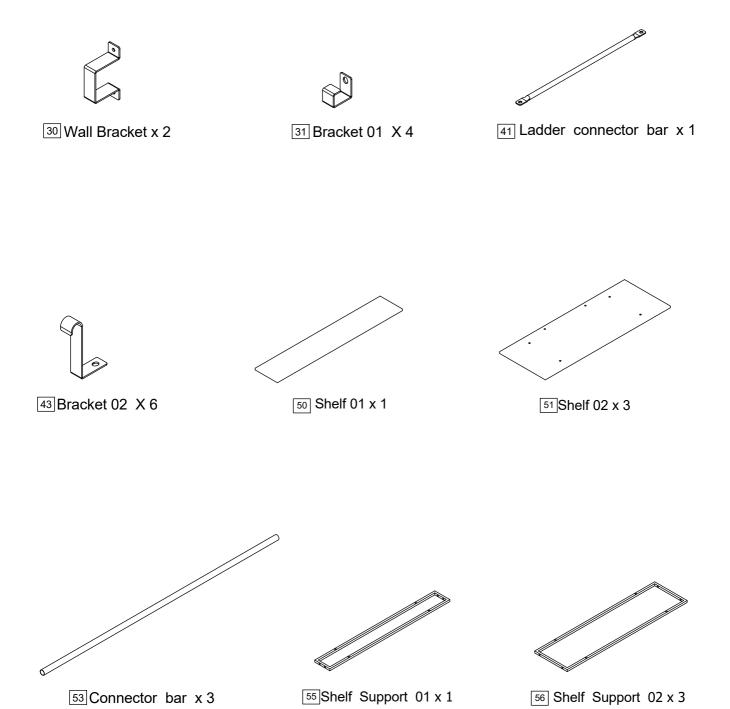

Components - Fittings

Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied are required.

A	B	0	
55mm Bolt M6 X 6	35mm Bolt M6 X 16	27mm Bolt M6 X 18	
0	a	6	
22mm Bolt M6 X 16	17mm Bolt M6 X 18	10mm Bolt M6 X 6	
G	A	•	
M6 Spring washer x 8	M6 Metal washer x 8	Plastic washer x 8	
Allen Key x 1			

Tools required			
Charles and a second as a seco	Ruler/tape measure		


Ruler - User this ruler to help correctly identity the screws						
0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130	135 140 145 150 155 160 165 170					

Step 1

Attach end guard rail 7 to post 01 1 and post 02 2 with **B**.

Attach Connector Bar
53 X 2 to post 01 1
and post 02 2 with
A .

Attach Side Rail 5 to post 01 1 and post 02 2 with .

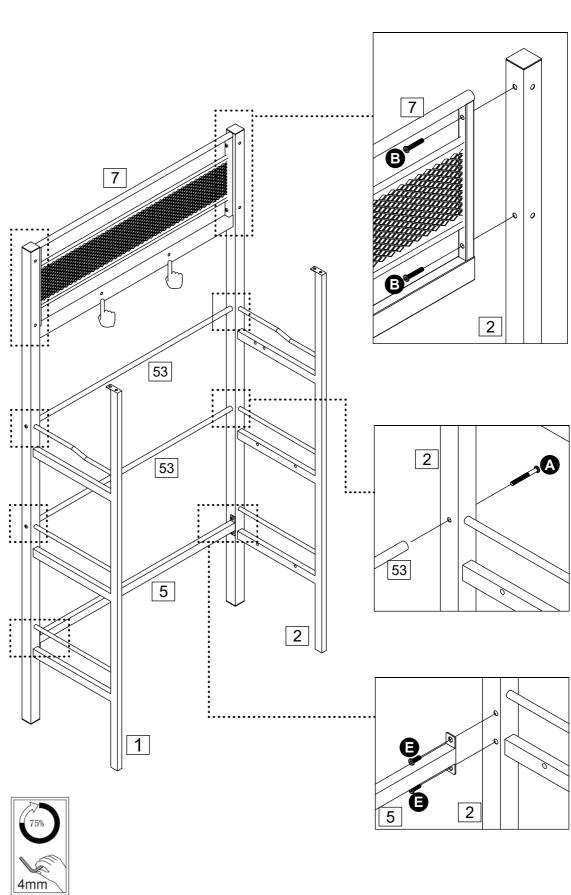




Attach end guard rail 7 to post 03 3 and post 04 4 with **B**.

Attach Connector Bar 53 to post 03 3 and post 04 4 with A

Attach Side Rail 5 to post 03 3 and post 04 4 with E .

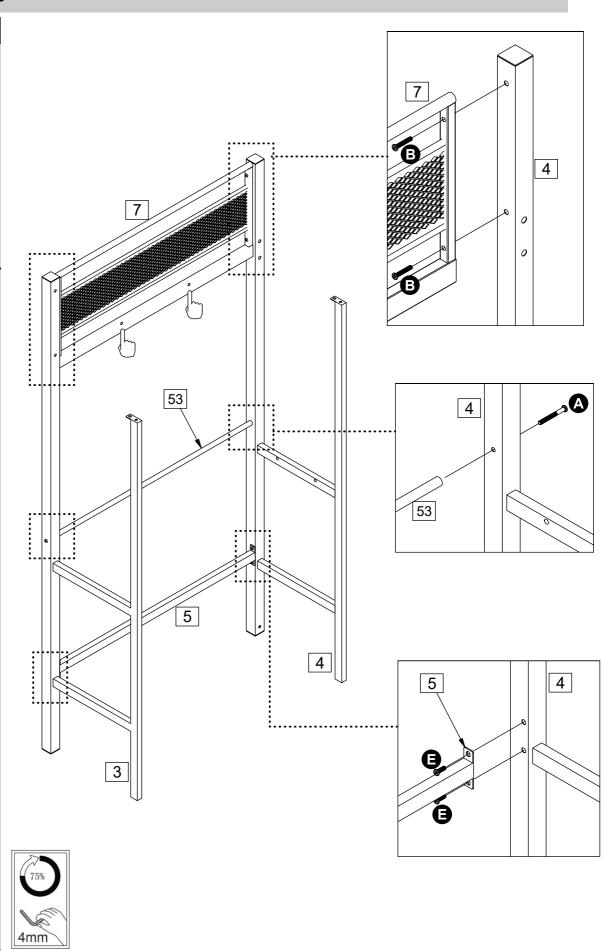

Step 3


Attach rear guard rail 13 to post 02 2 and post 03 3 with **BEGH1**.

post 01 1 with BBGH

and post 04 4 with GB

GHU.


Attach front guard rail 12 to

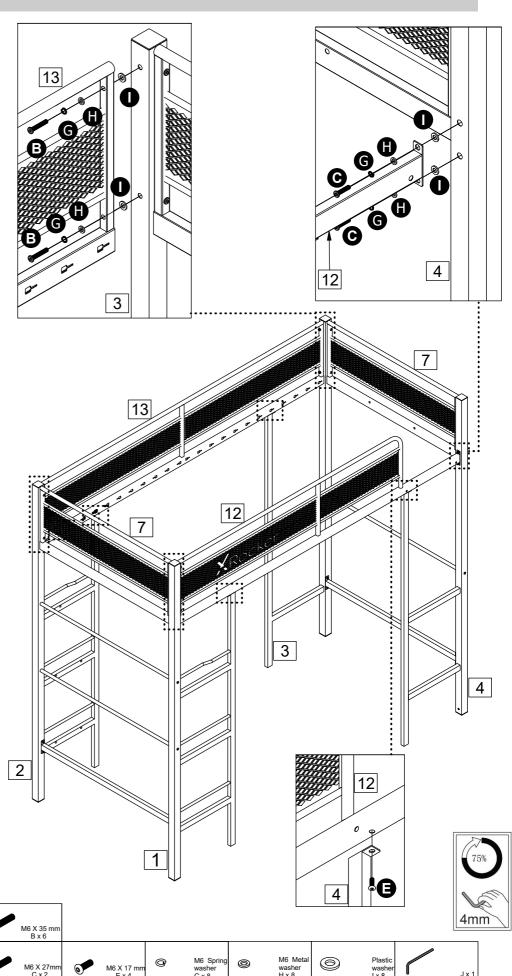

Step 4

Attach Shelf Support 01 55/ Shelf Support 02 56 X2 to post 01 1 and post 02 2 with **C** .

Attach Shelf Support 02 56 to post 03 3 and post 04 4 with $^{\bullet}$.

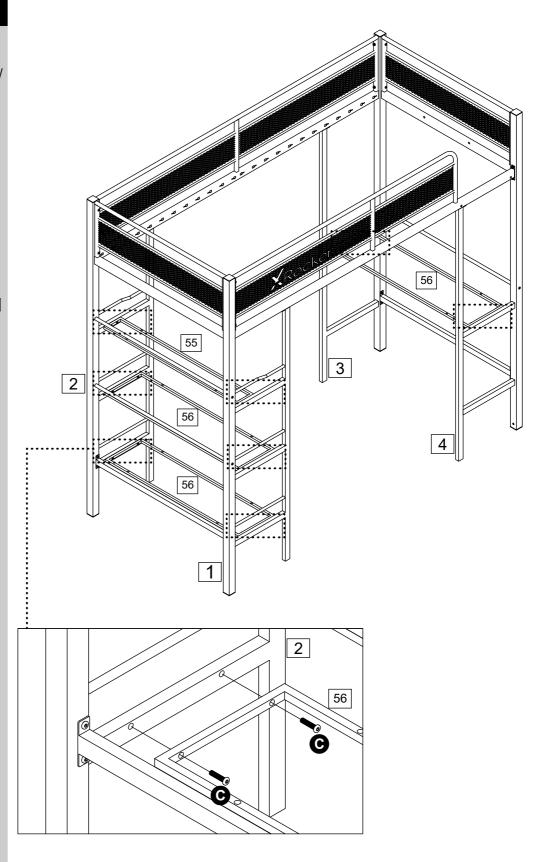






Step 5


a: Secure the slats $\boxed{14a}$ x24 to rear guard rail $\boxed{13}$ and front guard rail $\boxed{12}$.


b: Secure the plastic plug $\boxed{15}$ x48 to rear guard rail $\boxed{13}$ and front guard rail $\boxed{12}$.

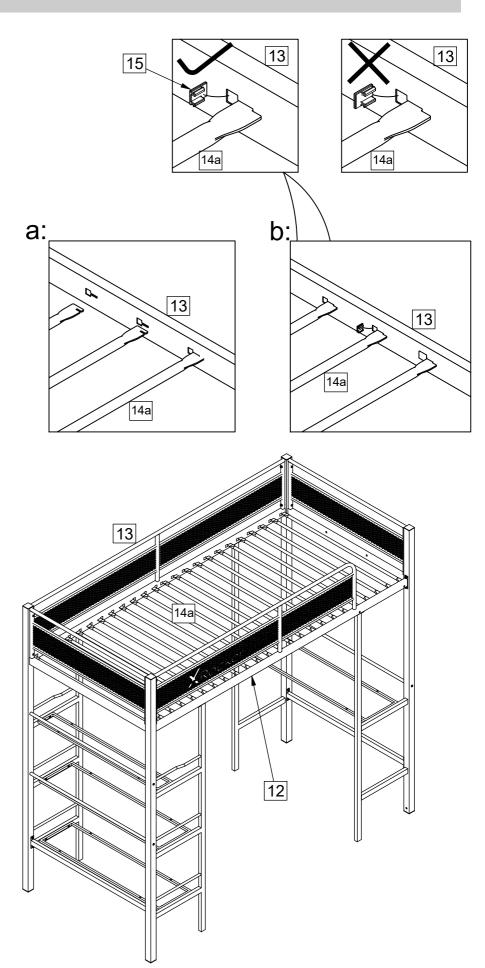

Step 6


Secure slat spacer $\boxed{16}$ x23 to slats $\boxed{14a}$ x24

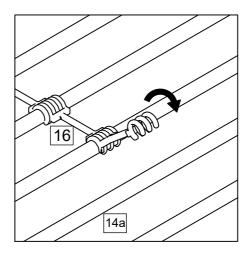

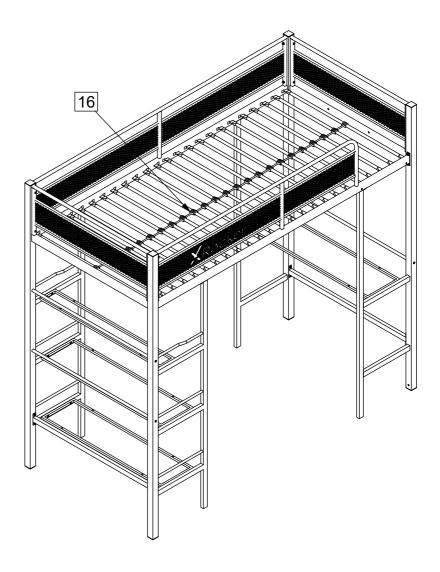

Step 7


Attach bracket 01 31 x 4 to end guard rail 7 x 2 with

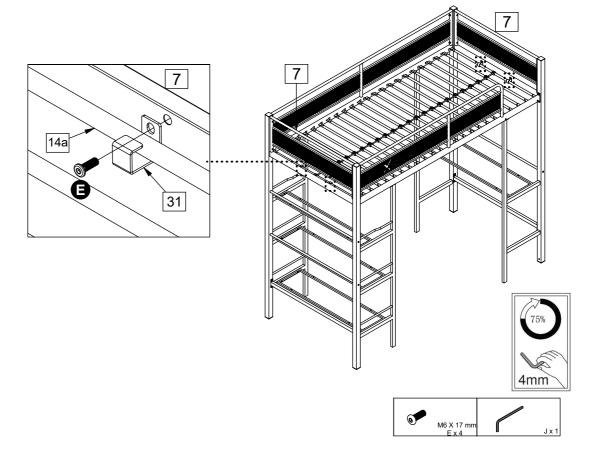


Step 8

Attach Shelf 01 50 to Shelf Support 01 55 with **D**.

Attach Shelf 02 51 X3 to Shelf Support 02 56 X 3 with **D**.

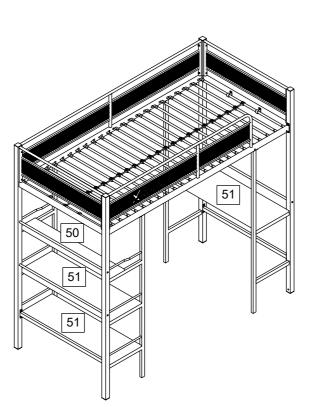

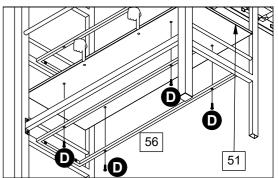




Step 9


Attach Bracket 02 43 X2 to Shelf 01 50 and Connector bar 53 with

Attach Bracket 02 43 X 4 to Shelf 02 51 X 2 and Connector bar 53 X2 with F.

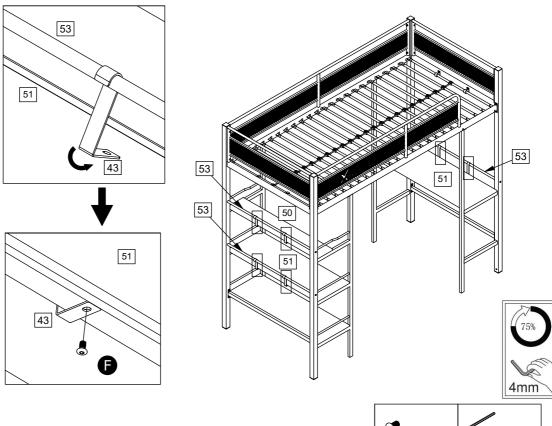


Step 10

Attach Ladder 22 to Front Guard Rail with **B**

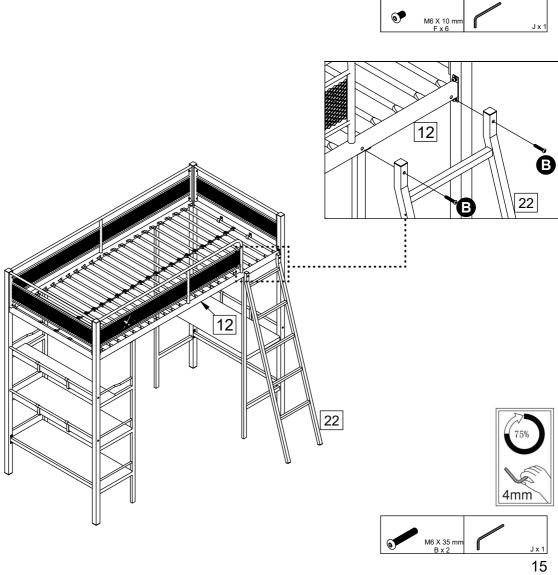

Step 11

Attach Ladder Connector Bar 41 to Ladder 22 and Post 04 4 with

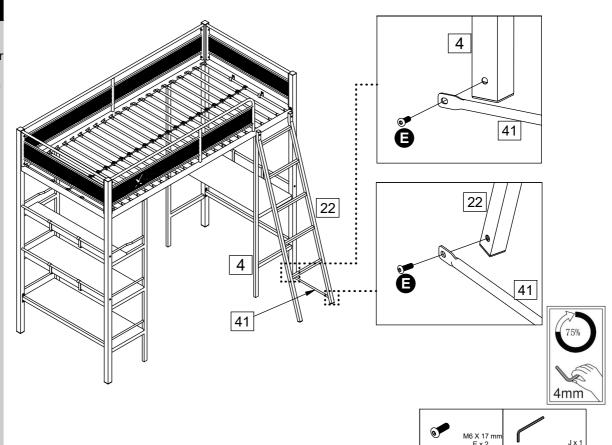

Step 12



Assembly is complete



A Guide to Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.



Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualifed tradesperson if you are unsure.

 
Hints:

- 1: General rule: Always use a larger screw and wall plug if you are not sure.
- 2: Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- 4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug




Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

 No.2 "Plasterboard" wall plug




For use when attaching light loads on to plasterboard partitions.

 No.3 "Cavity Fixing" wall plug




For use with plasterboard partitions or hollow wooden doors.

 No.4 "Cavity Fixing-Heavy Duty" wall plug




For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

 No.5 "Hammer Fixing" wall plug



For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

 No.6 "Shield Anchor" wall plug Heavy loads



For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.



Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.