


XRocker®

Evo Pro

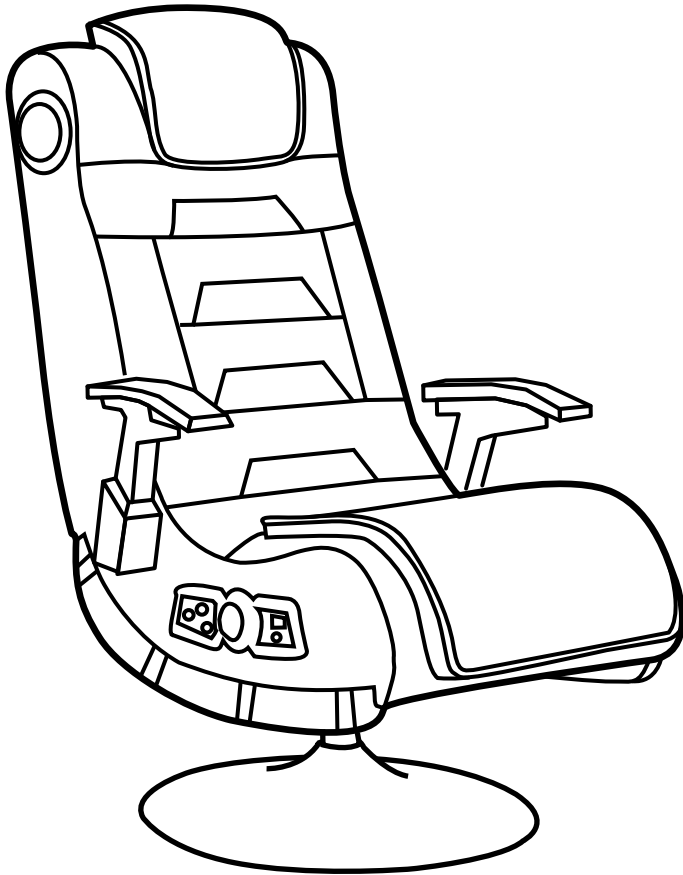

Need Help?

www.xrockeruk.com/pages/support

IMPORTANT: You must keep your original retail receipt as proof of purchase.

Welcome to X Rocker!



Thank you for purchasing this X Rocker gaming chair. You are now close to enhancing your favourite games with **glorious audio!**

To get started, please assemble the chair using the assembly instructions on the separate leaflet and then follow the instructions in this manual to **get rocking!**

Table of contents

- Box contents and control panel overview
- Wireless Connection guide: TV (All consoles)
- Wired Connection guide: TV (All consoles)
- Connect by controller (PS4 systems only)
- Bluetooth Connection Guide
- Troubleshooting tips
- Health and safety information
 - Power supply safety information

 
B

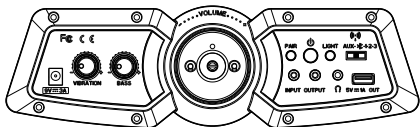


+ (B1)



 
+ (B3)



+ (B5)

 

+ (B2)

 

+ (B4)



+ (B6)

B1 - 3m 3.5mm to 3.5mm Audio cable

B2 - 15cm RCA to female 3.5mm audio cable

B3 - RCA female to female adapters

B4 - 0.15m 3.5mm to 3.5mm Audio cable


B5 - Power Supply Cable

B6 - Wireless Transmitter

Pair button: Press this to reset the Bluetooth function on your X Rocker control panel. This will disconnect the X Rocker from your Bluetooth device and allow the chair to be discoverable in another device's Bluetooth menu.


Light Button: Press this to adjust the colour of the LED piping. This function allows 7 different solid colours and an flashing effect option.

Control panel overview

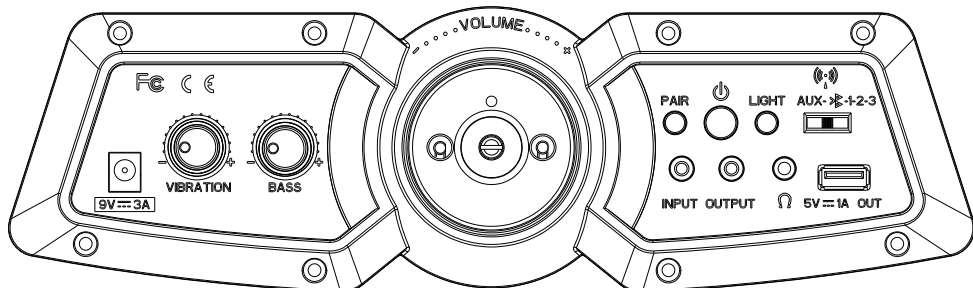


Wireless connection guide: TV (All consoles)

To connect using the wireless transmitter, connect the Wireless transmitter (**B6**) to your TV set using the 3.5mm to 3.5mm cable (**B1**)

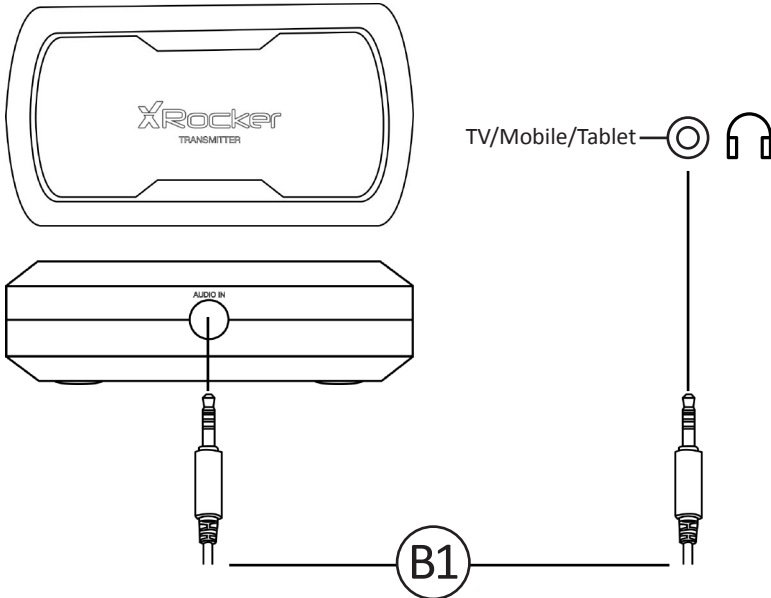


Once connected, Set the control panel on the chair and the Wireless transmitter to the same band (**1,2,3**)

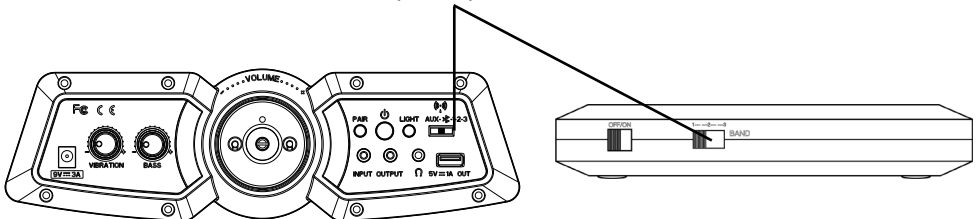

To get the best sound, make sure that the volume on the TV is set to approximately **50%** of the maximum. Depending on the TV you may need to set the volume level separately in the TV sound settings menu. (Please refer to TV manual for guidelines.)


Wired connection guide: TV (All consoles)

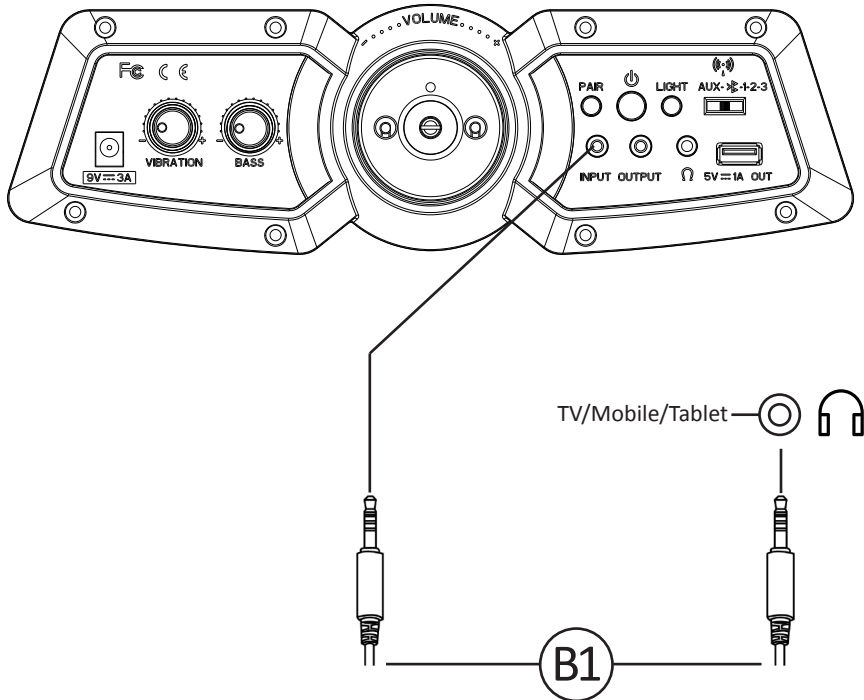

1. Connect **B1** Cable to X Rocker control panel MP3 INPUT sockets.
2. Connect other end of **B1** 3.5mm end into the headphone socket of your television.
3. Once connected to your TV, increase volume to 50% of the maximum for the best sound level. **

** Depending on your TV you may need to increase the headphone volume separately in the TV sound settings.

Connect by controller: (PS4 systems only)

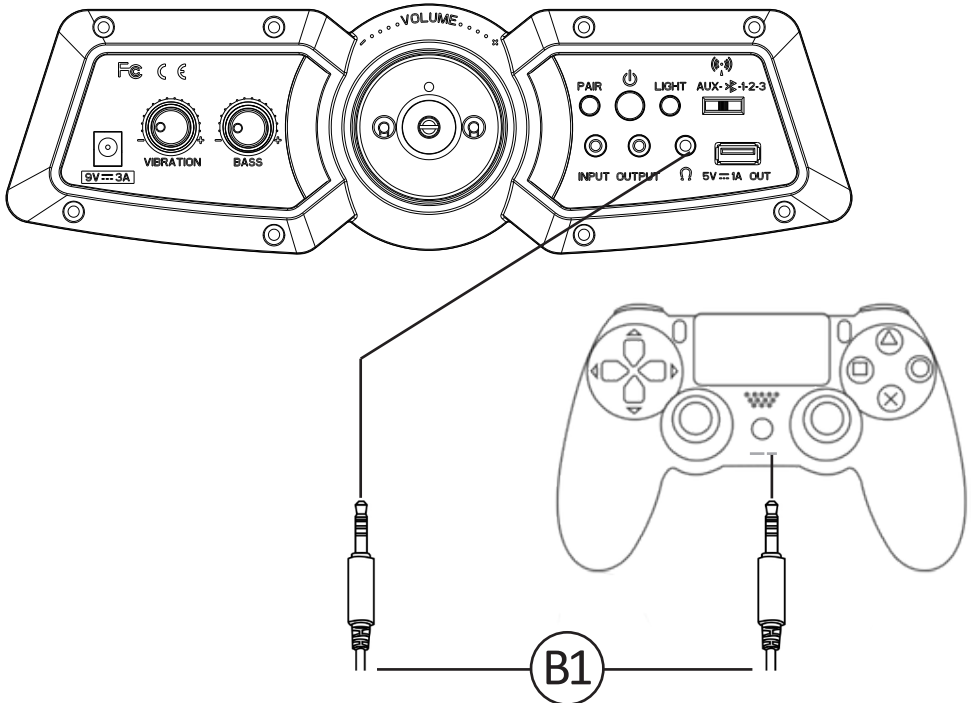


1. Connect the **B1** cable to the bottom of the PS4 controller via the headset socket.
2. Connect the other end of the **B1** cable to the chair via the green port.
3. With the PS4 turned on, go to the main menu (or locate the main menu screen). **Press and hold** the PS button on the PS4 controller until the quick menu appears on screen.
4. In this menu select [**Adjust sound and devices**]
5. Then select [**output to headphones**]
6. Change the setting from [**Chat Only**] to [**All audio**]
7. Make sure the volume in the previous menu is set to the maximum.
8. Set the control panel Wireless switch to the 'OFF' position.

Bluetooth connection guide


Step 1:

Switch the X Rocker Avanti's wireless switch to the Bluetooth position.

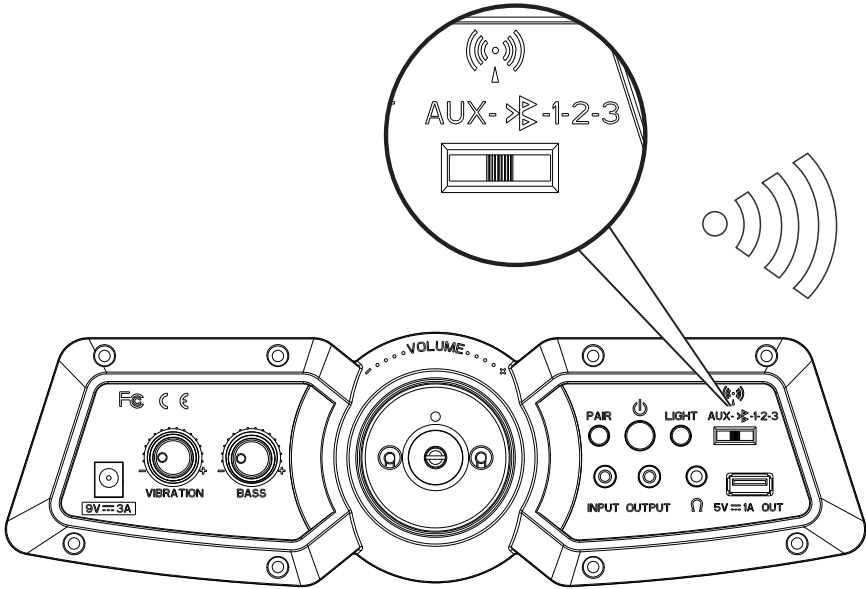

Step 2:

On the Audio output device go into its Bluetooth settings, turn Bluetooth on if it is not on already and search for **XROCKER**. Upon finding this, select the **XROCKER** option. If a passcode is required the four digit code will be **'0000'**.

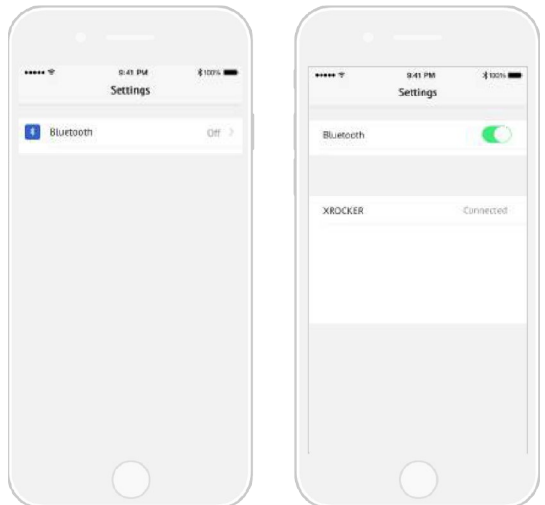

Troubleshooting tips

Issue	Troubleshooting steps
No power going to control panel	<ul style="list-style-type: none">• Make sure that the power cable is connected correctly.• Make sure that the power supply at the power source is working correctly.• With the chair turned to the ON position, give the power cable a slight wiggle in the port. If any lights flicker (or not) then please contact support (details below).
No sound	<ul style="list-style-type: none">• Review the connection methods on the previous page and try alternative connection methods if possible.• Confirm that the device/system is correctly configured as per previous connection guide.• Make sure that the wireless channel switcher is in the corresponding position that suits your connection method. (1,2,3 for wireless and AUX for wired connections).
Wireless transmitter cuts out during gameplay/No vibration or subwoofer sound via analogue connection	<ul style="list-style-type: none">• Please make sure that the volume of the source device is at a higher level to strengthen the audio signal.
The cables connected to my X Rocker have been broken accidentally	<ul style="list-style-type: none">• Please contact X Rocker support (service@XRockerNation.co.uk) regarding this issue.
Interference over wireless connection	<ul style="list-style-type: none">• In this case, try another of the three wireless bands to isolate the signal.

Health and safety information

- Avoid immersing or allowing the X Rocker to come into contact with liquids.
- Please consult X Rocker Support before unscrewing any of the electrical components on the chair.
- Please be mindful of any cabling laid out between the X Rocker and power source/audio device.
- Please be mindful of cabling attached when moving/swivelling the X Rocker.
- If the cables or electrical equipment are broken then this may present a choking risk, please contact Support for replacements and dispose of these parts safely.
- Do not stand on the X Rocker or exceed the 120kg weight limit via other means.
- Do not lean back on the chair to the point in which the pedestal would lift off the ground.
- X Rocker armrests are designed for support and comfort during gameplay, please do not use these as support for getting in/out of the chair.
- Playing audio for long periods at loud volumes may contribute to difficulties in hearing.
- Please be considerate to others when playing audio through the X Rocker speakers at higher volumes.

Power supply safety information

ATTENTION:

- A. For Power Adapter, the apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus;
- B. For Power Adapter, the MAINS plug is used as the disconnect device, the disconnect device shall remain readily operable;
- C. Only use the attachments/accessories specified by manufacturer.

Power Supply unit trademark: BI;

Model name: BI - - ° y;

Input: ° #100-240V~50/60 Hz, A;

Output:) # †— A

Need Help?

www.xrockeruk.com/pages/support

IMPORTANT: You must keep your original retail receipt as proof of purchase.

Declaration of Conformity

We ___

ACE BAYOU CORP

(Name of Applicant or his authorized representative)

1340 Poydras Street Suite 1870 New Orleans, LA 70112 USA

(Address)

Declare under our own responsibility that the product

Product description : X ROCKER NEW EVO PRO

Model : 5152501

(Model, descriptions, versions, supplementary characteristics)

to which this declaration refers conforms with the relevant standards or other standardizing documents

EN 300 328V2.1.1(2016-11)

EN 62479:2010

EN 301 489-1 V2.1.1 (2017-02)

EN 55032:2015,EN 61000-3-2:2014

EN 61000-3-3:2013,EN 55020:2007 +A11:2011

(Titles, dates of publication of documents mentioned)

According to the regulations in RED 2014/53/EU

(if necessary: directives, main regulations)

2018-5-02

(Place, date)

Alei Cao

(Name and signature of person responsible)