


Wired connection guide: PS, XBOX & Switch

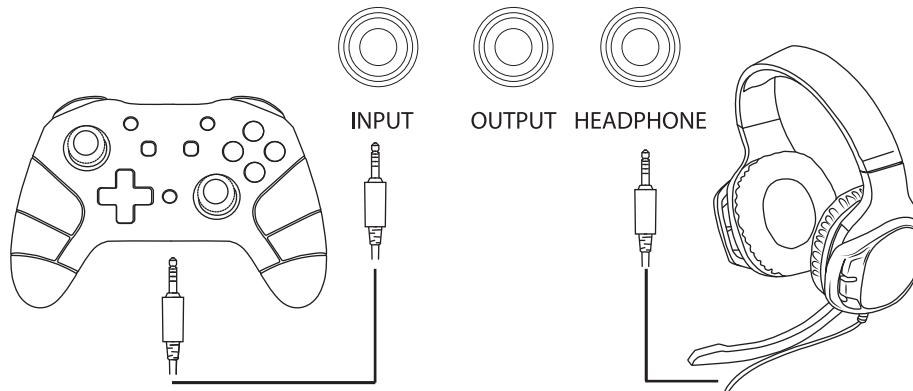

PS4™ DUALSHOCK 4™ CONNECTION GUIDE*

1. Connect the B1 cable to the bottom of the PS4™ controller via the headset socket.
2. Connect the other end of the B1 cable to the chair via the green input port.
3. With the PS4™ turned on, go to the main menu (or locate the main menu screen). Press and hold the PS button on the PS4™ controller until the quick menu appears on screen.
4. In this menu select [Adjust sound and devices]
5. Then select [output to headphones]
6. Change the setting from [Chat Only] to [All audio]
7. Make sure the volume in the previous menu is set to the maximum.

PS5™ DUALSENSE™ CONNECTION GUIDE*

1. Connect the B1 Cable to the bottom of the PS5™ Dualsense controller via the headset socket
2. Connect the other end of the B1 cable to the chair via the green input port
3. Press the PlayStation™ button once to bring up the control centre
4. Select [Sound], [Output Device] then [Headset (controller)]
5. Ensure that [Output to Headphones] is correctly set to [All Audio]
6. You can check this by going to [Settings], [Sound] > [Audio Output] > [Output to headphones] > [All audio]

XBOX ONE™/SERIES™ CONTROLLER GUIDE*

1. Connect the B1 cable to the bottom of the Xbox™ controller via the headset socket**
2. Connect the other end of the B1 cable to the chair via the green input port
3. The Xbox™ will automatically recognize the connection and pass through to the X Rocker.
4. to increase volume, press the guide button, navigate to the speaker icon and increase the headset volume setting

SWITCH™ CONNECTION GUIDE

1. Connect the B1 cable to the top of the Switch™ via the headphone socket***
2. Connect the other end of the B1 cable to the chair via the green input port

*For headset and chat compatibility, you will need to place a CTIA compliant headset into the headphone socket of the X Rocker control panel. Please check with your device manufacturer to ensure that you have a CTIA compliant headset. If you use an OMTP compliant headset then you may experience issues with chat and audio functionality.

**You may need an Xbox On™e headset adapter if a headset socket is not available on your controller. These are available separately through any gaming retailer.

*** Voice-Chat compatibility for Switch may rely on a third-party mobile phone app rather than direct console connection for certain games, please check the game developer's information if you encounter any compatibility issues.