



# Wireless connection guide: TV (All consoles)

To connect using the wireless transmitter, connect the Wireless transmitter (**B6**) to your TV set using the 3.5mm to 3.5mm cable (**B1**)

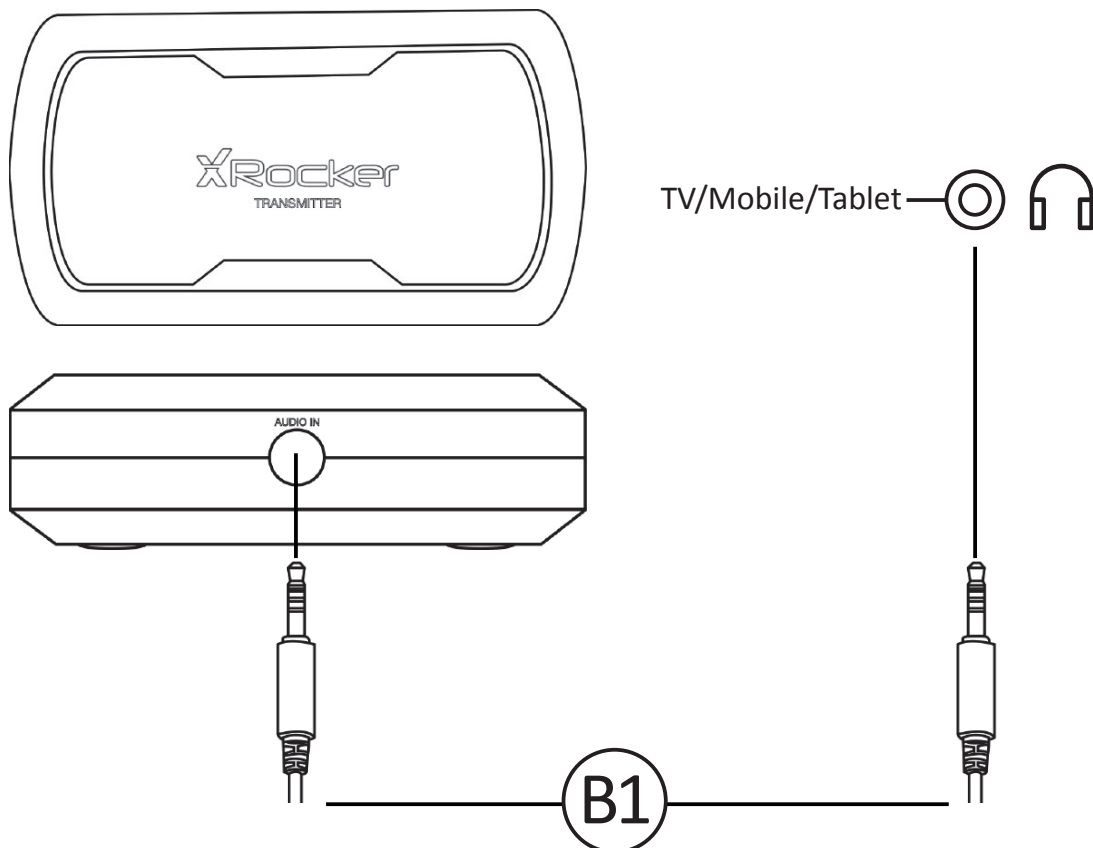

Once connected, Set the control panel on the chair and the Wireless transmitter to the same band (**1,2,3**)

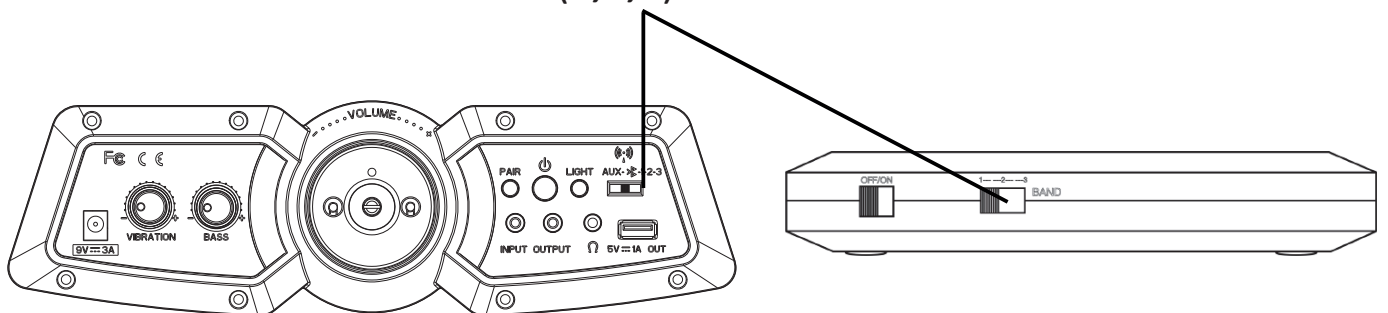

To get the best sound, make sure that the volume on the TV is set to approximately **50%** of the maximum. Depending on the TV you may need to set the volume level separately in the TV sound settings menu. (Please refer to TV manual for guidelines.)