



Wireless connection guide: TV (All consoles)

To connect using the wireless transmitter, connect the Wireless transmitter to your TV set using the 3.5mm to 3.5mm cable.

For Power, connect the Wireless DAC Via the USB Cable into the TV or console

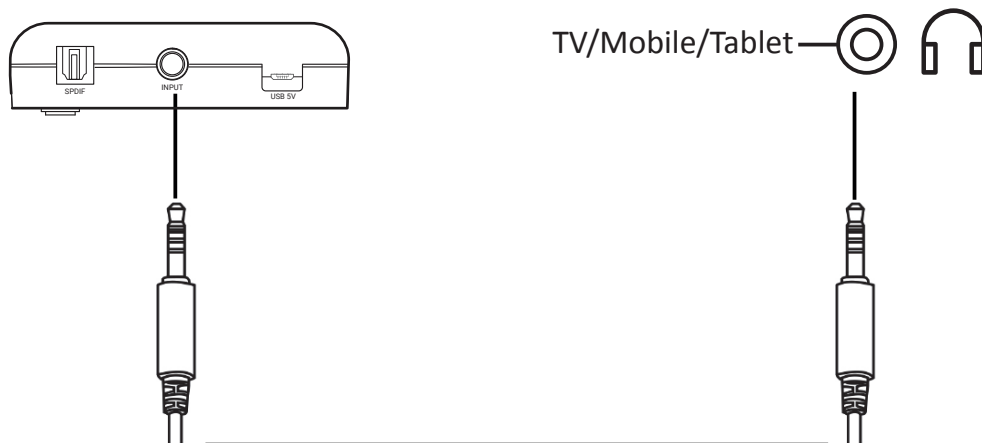

Once connected, Set the control panel on the chair and the Wireless transmitter to the same band (**1,2,3**)

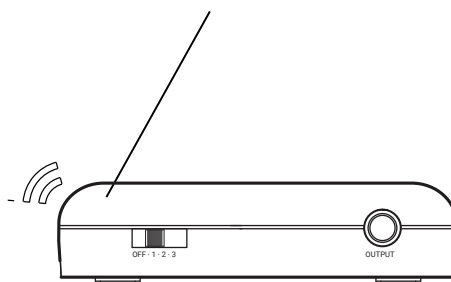

To get the best sound, make sure that the volume on the TV is set to approximately **50%** of the maximum. Depending on the TV you may need to set the volume level separately in the TV sound settings menu. (Please refer to TV manual for guidelines.)